

Roestvaststalen ontluchtingsnippels
Stainless steel breather nipples
Entlüftungsnippel aus nichtrostendem Stahl
Reniflards en acier inoxydable
Purgadores de acero inoxidable
Raccordi di sfiato in acciaio inossidabile

Installatieinstructies

Installation instructions


Einbauanleitung

Instructions d'installation


Instrucciones de instalación

Istruzioni per il montaggio


AB16S

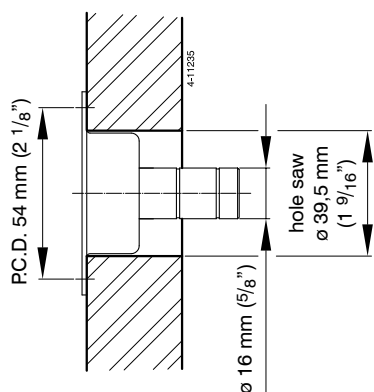


AB16B

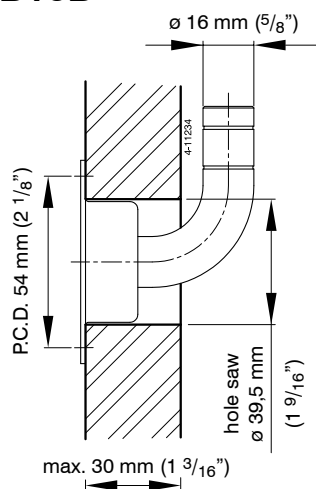


AB19B

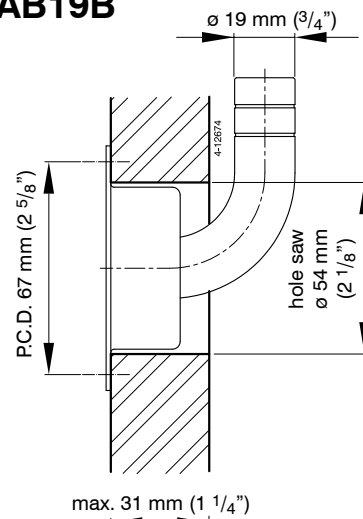


AB19S

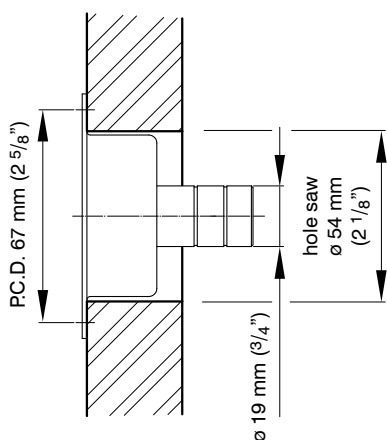




AB25B

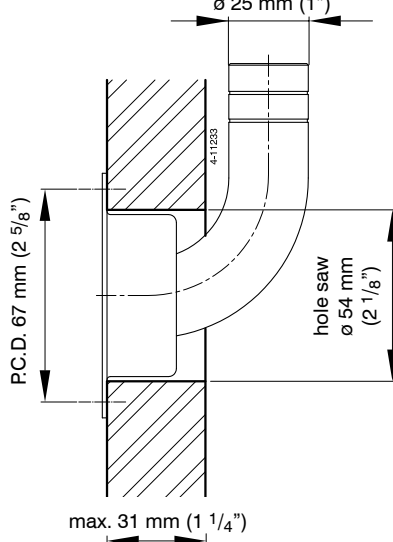

AB38B

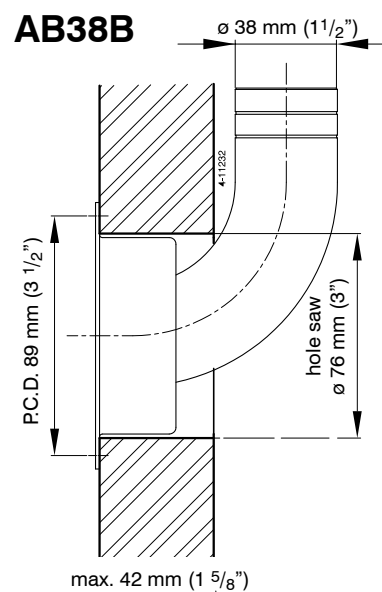



AB19SL

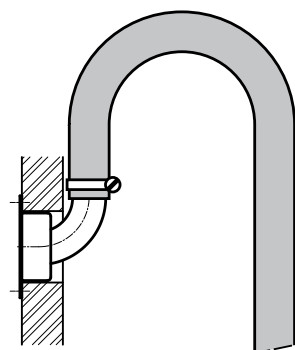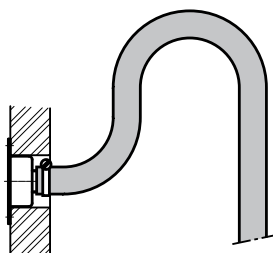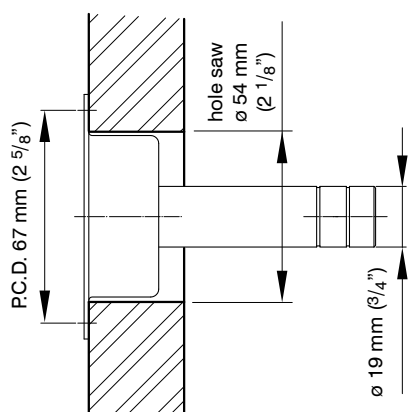


Hoofdafmetingen
Principal dimensions

Hauptabmessungen
Dimensions principales

Dimensiones principales
Dimensioni principali

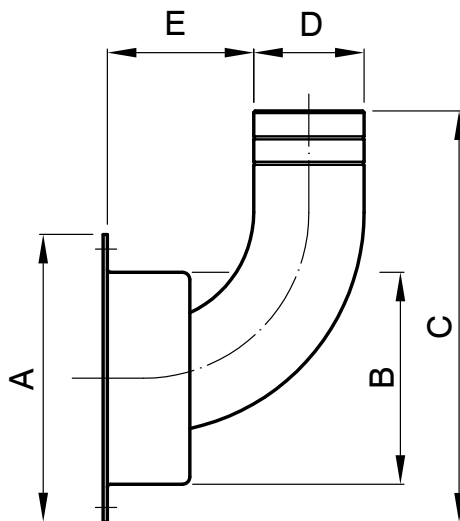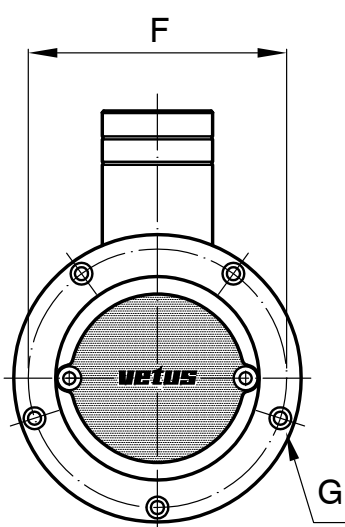

AB16B, AB19B, AB25B, AB38B

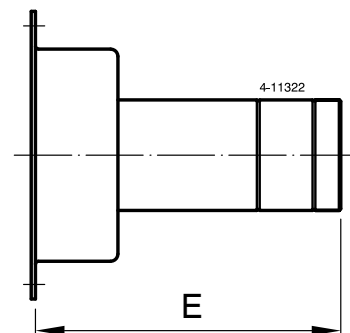

AB16S, AB19S, AB19SL

	A	B	C	D	E	F	G
AB16B	64 (2 1/2")	38 (1 1/2")	81 (3 3/16")	15,9 (5/8")	37 (1 7/16")	54 (2 1/8")	ø 4,5 x 3 (3/16")
AB16S	64 (2 1/2")	38 (1 1/2")	-	15,9 (5/8")	47 (1 7/8")	54 (2 1/8")	ø 4,5 x 3 (3/16")
AB19B	77 (3 1/32")	51 (2")	99 (3 29/32")	19 (3/4")	33,5 (1 5/16")	67 (2 5/8")	ø 4,5 x 4 (3/16")
AB19S	77 (3 1/32")	51 (2")	-	19 (3/4")	52 (2")	67 (2 5/8")	ø 4,5 x 4 (3/16")
AB19SL	77 (3 1/32")	51 (2")	-	19 (3/4")	90 (3 9/16")	67 (2 5/8")	ø 4,5 x 4 (3/16")
AB25B	77 (3 1/32")	51 (2")	112 (4 13/32")	25,4 (1")	38 (1 1/2")	67 (2 5/8")	ø 4,5 x 4 (3/16")
AB38B	99 (3 29/32")	73 (2 7/8")	142 (5 9/16")	38,1 (1 1/2")	50 (1 31/32")	89 (3 1/2")	ø 4,5 x 5 (3/16")

Onderhoud

Reinig de zeef minimaal éénmaal per jaar.

Maintenance

Clean the filter at least once annually.

Wartung

Das Sieb mindesten 1 Mal pro Jahr reinigen.

Entretien

Nettoyez le tamis au moins une fois par an.

Mantenimiento

Limpiar el colador al menos una vez al año.

Manutenzione

Pulire il setaccio almeno una volta all'anno.

vetus n.v.

FOKKERSTRAAT 571 - 3125 BD SCHIEDAM - HOLLAND - TEL.: +31 10 4377700 - TELEX: 23470
TELEFAX: +31 10 4372673 - 4621286 - E-MAIL: sales@vetus.nl - INTERNET: <http://www.vetus.com>