## **ASH MAST HOOPS**



These mast hoops are steamed from carefully selected ash timber where the grain is best suited for the hoop, but with all natural products they are not controlled by the manufacturer nor retailer. We accept no responsibility for hoops breaking when fitting to mast. The customer must take all care not to over stress the mast hoop when fitting and should ensure that the hoop is wound onto the mast at the thinnest section of the spar and the the hoop is opened up in such a way that it is wound onto the spar perpendicular to the spar and not at right angle to the spar to minimise the amount the hoop needs to be strained. Hoops are supplied with copper boat nails and roves to allow the hoop to be fitted on the mast and riveted in place without removal of mast furniture, the stainless steel bolt is temporary to hold the hoop in place during manufacturing and transit and should be replaced. A small "anvil" should be made with a nipple of a suitable size for the rivet



 
WRONG



RIGHT

head on the inside of the hoop, this anvil slides between the hoop and the mast and should have a soft back to avoid damage to the mast. Hoops have been

soaked in linseed oil on completion of manufacture, this is not a final finish, hoops will require more oil or vanish as chosen by the customer.

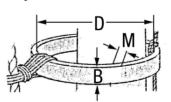



TOPLICHT	D	D	В	М
Art-Nr.	mm	Zoll	mm	mm
1397-005	125	5	19	16
1397-006	150	6	22	17
1397-007	175	7	27	20
1397-008	200	8	25	20
1397-009	230	9	29	22
1397-010	255	10	34	23
1397-011	280	11	32	21
1397-012	305	12	38	23
1397-013	330	13	36	26

TOPLICHT	D	D	В	М
Art-Nr.	mm	Zoll	mm	mm
1397-014	355	14	38	25
1397-015	380	15	38	28
1397-016	405	16	45	31
1397-017	430	17	46	32
1397-018	460	18	48	32
1397-020	510	20	54	36
1397-022	560	22	60	44
1397-024	610	24	64	48