



The SPEEDY STICHER Sewing Awl

How to Use the Speedy Sticher Sewing Awl


The Speedy Sticher is a handy sewing awl that creates the perfect lock-stitch, by hand. Uses for the Speedy Sticher including the assembly and repair of leather goods, canvas tarps, climbing and camping gear, book binding repair, saddlery and tack items, athletic equipment, even shoes and belts. Included with the basic sewing awl are two different needles and a bobbin of thread.

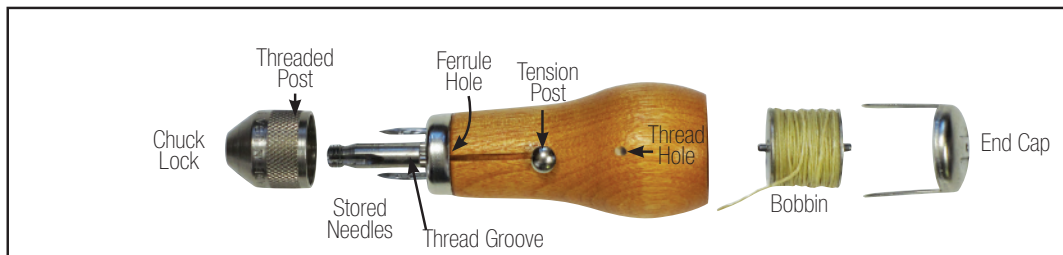

How To Set-Up:

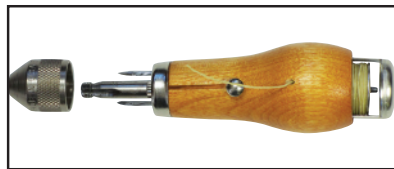

1) Pull out end cap (with bobbin inside). Push the end of bobbin thread out hole in handle. Replace end cap, securing the bobbin. Wrap thread end around tension post. Pass thread end "under" thread, this ensures it will feed properly.

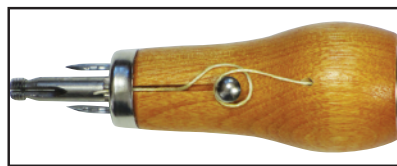


2) Pass thread along groove in handle and through hole in ferrule.



3) Select one of the needles. Insert needle in threaded post. Align the groove on needle with groove on post.



4) Run thread along groove on post and into eye of the needle.

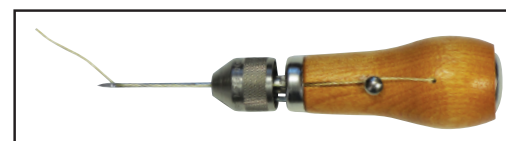

5) Screw chuck lock back into place and pull thread out to the length needed to complete project.


Types of Thread:

Fine thread should be used for projects with thinner material to stitch. Common uses for fine thread projects include tent canopy fabric, backpacking weight, breathable tent fabric, tent fly material, thinner shoe fabric, etc. Fine threads work best with the #130 small straight needle.

Coarse thread is better suited for heavy fabrics such as a thick leather, heavy duty canvas, boat sails, baseball gloves, sports equipment and more. The #130A large straight needle and the #130B large curved needle work best with the thicker, more coarse thread.

Bobbins can be threaded with both kinds of thread.

TOPLICHT Art-Nr.	Beschreibung
2020-000	Handnähahle
2020-100	Ersatznadel, gerade (#8S)
2020-101	Ersatznadel, krumm (#8C)
2020-102	Spezialnadel, gerade, fein (#4)
2020-200	Garn, 3-fach, gewachst, fein, 160 m
2020-201	Garn, 4-fach, gewachst, stark, 160 m

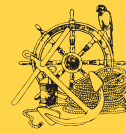

The SPEEDY STICHER Sewing Awl

Prepare Your Project For Stitching:

On Leather: To help keep stitches straight, first use a Stitching Groover to mark the path for stitching or a stylus to lightly mark a guideline.

On Canvas & Upholstery: Draw guidelines with chalk or a pencil.



Stitching Groover



Stylus



Overstretch Wheel



Overstretch Wheel: Mark stitching hole placement with an Overstretch Wheel or ruler and stylus.


Stitching Pony: To help hold your project while stitching, use a Stitching Pony.

3-Hole Punch: To make stitching easier, pre-punch holes in leather.




Note: The length of thread needed to stitch the project is equal to the length of the stitch line to be done plus 3".


How to stitch:

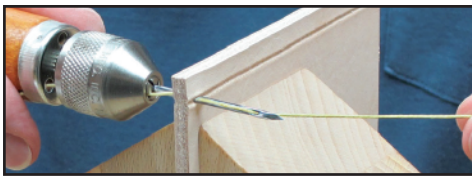


1) From the back side, push needle through material. On front-side, fully draw-out thread, long enough to do stitching - adding 3".

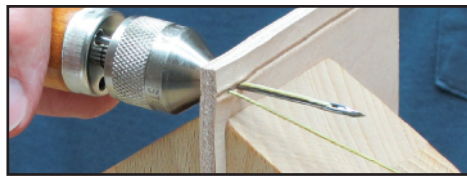


2) While keeping thumb over thread on handle of awl, hold thread and pull needle back out hole and start it through second hole.

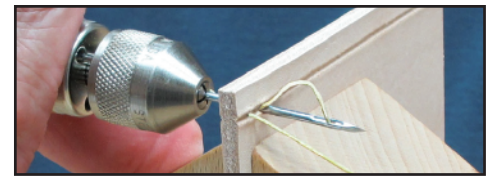


3) Push needle through second hole as far as it will go. Then pull back slightly on the awl just until a loop is formed.

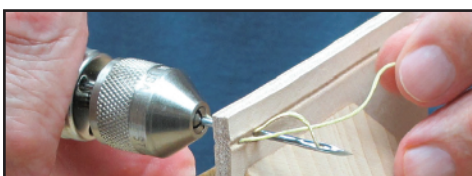

4) Pass all of the thread through this loop.

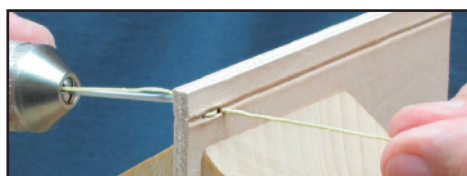


5) Hold thread end taut. Pull needle out of hole, forming a lock-stitch. Pull taut, the lock-stitch knot should be buried in the middle of the fabric layers.

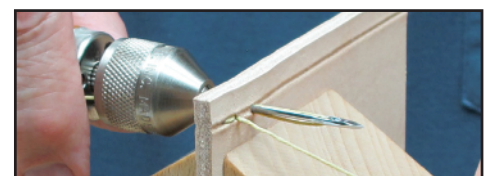

6) Release more thread between needle and material to allow for next stitch. Continue.


To Finish:

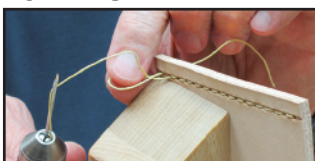

1) After last hole on the back side, grasp loop and pull out of hole.



2) Cut thread leaving two 3" lengths to tie off.

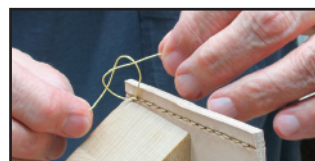

3) Tie ends in knot on back side. Trim thread.



4) To safely store the Speedy Sticher sewing awl, remove the needle from the threaded post and place back in appropriate slot. Screw the chuck lock back in place.

Bedienungsanleitung für die Handnähahle 'Speedy Stitcher'

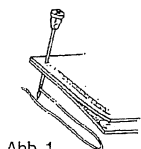
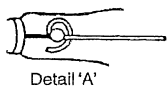
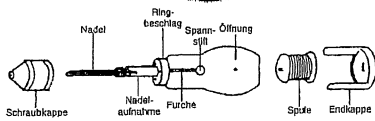
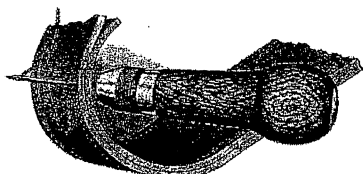


Abb. 1

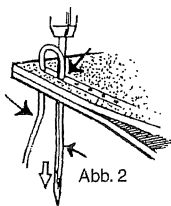


Abb. 2

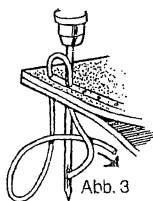


Abb. 3

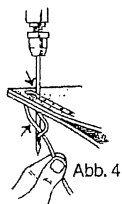


Abb. 4

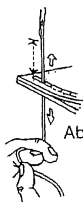


Abb. 5

Werkzeug vorbereiten

- Schrauben Sie die Kappe ab und entnehmen Sie eine der zum Vorschein gekommenen Nadeln.
- Ziehen Sie das Ende des Fadens von innen durch die Öffnung im Griff nach außen und führen Sie ihn um den Spannstift herum wie in Detail 'A' gezeigt.
- Führen Sie den Faden weiter durch die Furche im Griff und durch das Loch in Richtung Nadelaufnahme.
- Stecken Sie die gewünschte Nadel in die Aufnahme und führen Sie den Faden durch das Nadelöhr entlang der Vertiefung in Aufnahme und Nadel.
- Schieben Sie die Kappe über Faden und Nadel und schrauben Sie diese fest. Achten Sie darauf, daß der Faden nicht verklemt und frei laufen kann.

Nähen mit der Ahle

1. Machen Sie den ersten Stich durch die zu nähenden Teile und ziehen sie den Faden nach. Ziehen Sie den Faden ca. doppelt so lang wie die Naht werden soll aus der Ahle.
2. Nun ziehen sie die Nadel wieder heraus (jedoch nicht den ganzen Faden) und stechen sie das zweite Loch. Stecken Sie die Nadel bis zum Ende durch und ziehen Sie sie dann ein kurzes Stück zurück.
3. Durch die so entstandene Schlaufe stecken Sie das Ende des Fadens.
4. Ziehen Sie jetzt die Nadel ganz aus dem Loch heraus und
5. ziehen beide Fäden fest an.

Ziehen Sie vor jedem weiteren Stich etwas Faden aus der Ahle heraus. Wiederholen Sie diesen Vorgang bis zum Ende der Naht.

Wenn Sie beim Ende der Naht angekommen sind: Stecken Sie den Faden nicht wie vorher durch die Schlaufe, sondern ziehen Sie stattdessen an der Schlaufe einige Zentimeter Faden aus der Ahle heraus. Schneiden Sie den Faden ab und ziehen sie die Nadel ganz heraus. Die beiden Fadenenden befinden sich auf derselben Seite und können nun mit einem Kreuzknoten verknötet werden. Bei einiger Übung geht der Nähvorgang zügig voran. Die Naht ist von allen Seiten gleichmäßig sauber und ähnelt der einer Nähmaschine.



Erhältliche Ersatzteile

GA 3	Ersatznadel, gerade
GA 13	Ersatznadel, gerade, kurz
GA 4	Ersatznadel, gebogen
GA 14	Ersatzspule, leer
GA 15	grobes Garn, ca. 160m
GA 17	feines Garn, ca. 160m

Wenn Sie Fragen haben oder Ersatzteile brauchen, wenden Sie sich bitte an Ihren Händler.