

DAN BUOY *Owner's Guide*

MARKER BUOY **with automatic inflation**

MARKIERUNGSBOJE **mit automatischer Aufblasvorrichtung**





SEA SECURITY[®]
MARITIME SAFETY TECHNOLOGY

CONTENTS


Instructions for use	3
Deflation	5
Service instructions	6
Re-folding and Re-packing instructions	8
Care and maintenance instruction	9
Service record	11

INSTRUCTIONS FOR USE

- 1. Before every trip** fix the pouch with the DAN Buoy to the rails of the ship with the 3 Velcro webbings on the back of the pouch. (Fig. 1).
- 2. Check that the top of the pouch** is correctly closed in order to avoid water ingress.
- 3. In case you want to mark a casualty** or any other spot open the top of the pouch, pull out the yellow bag by the handle and throw it in the water. (Fig. 2).

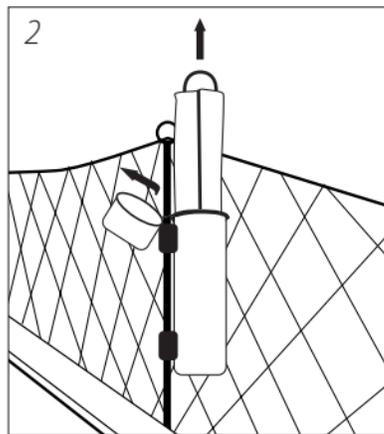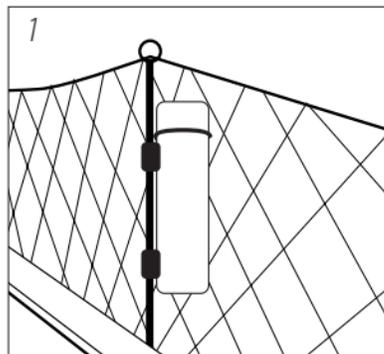


4. The DAN Buoy will automatically inflate and a signal light starts to flash. (Fig. 3).
5. After the trip take the pouch from the rails of the ship and store it in a dry place.

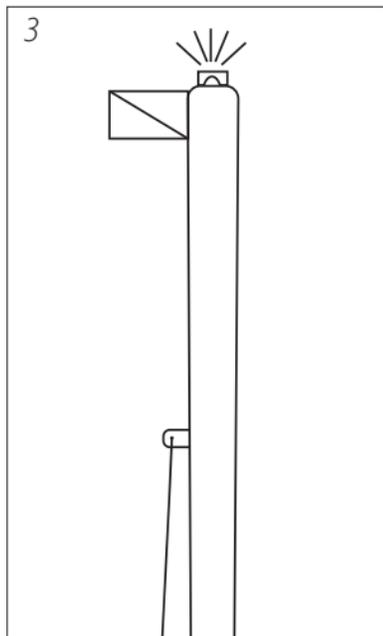

DEFLATION


Step 1.

Turn the dust cap around and insert the deflation mechanism into the oral tube (Fig.1).

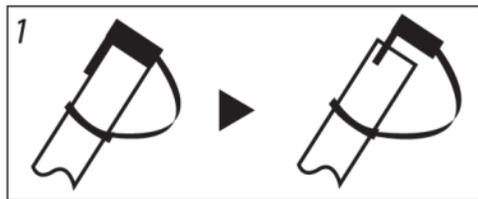

Step 2.

Hold the deflation mechanism in place with your finger and gently squeeze all air out of the buoy (Fig.2).

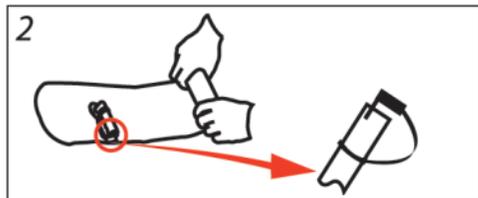


Step 3.

Replace the dust cap (Fig.3).



SERVICE INSTRUCTION

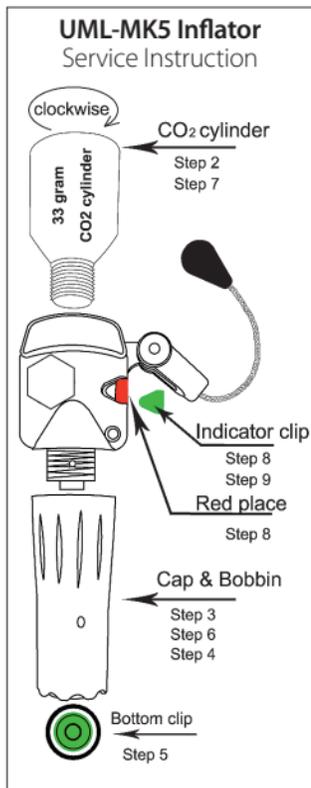



Note: Rearming must follow the sequence below.

The charge of the CO₂ cylinder for your DAN Buoy is **33 grams**.

Step 1: Unpack or open the DAN Buoy so that the manual/automatic inflator is visible.

Step 2: Unscrew used CO₂ cylinder in a counter-clockwise direction and immediately discard. Do not insert new cylinder at this time.

Step 3: Remove cap by turning counterclockwise, discard cap.

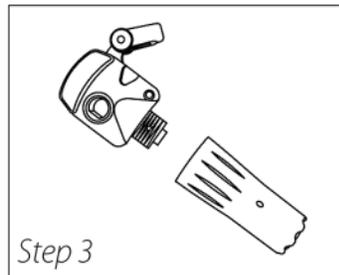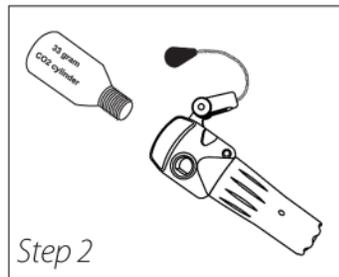

Step 4: Check the date on the cap body. Ensure that the date on the cap is not less than three months earlier than the next service date.



Step 5: Check **cap bottom** to be sure it **is green**.

Step 6: Install cap by screwing clockwise until it meets the inflator body shoulder.

Step 7: Install cylinder by rotating clockwise into inflator until cylinder is secured firmly in inflator.


Step 8: Close inflator arm within inflator body and carefully insert a new green indicator clip so that it fully covers the red semi-circle on the body.

Step 9: Check to be sure green indicator clip is firmly attached.

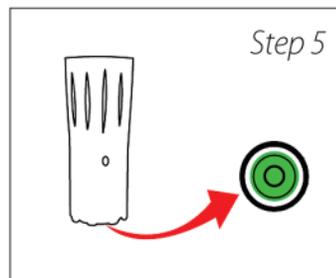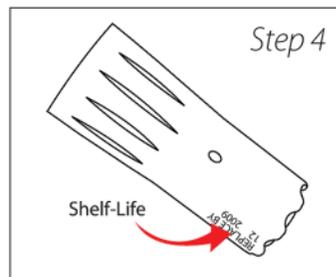


RE-FOLDING and RE-PACKING INSTRUCTIONS

Step 1

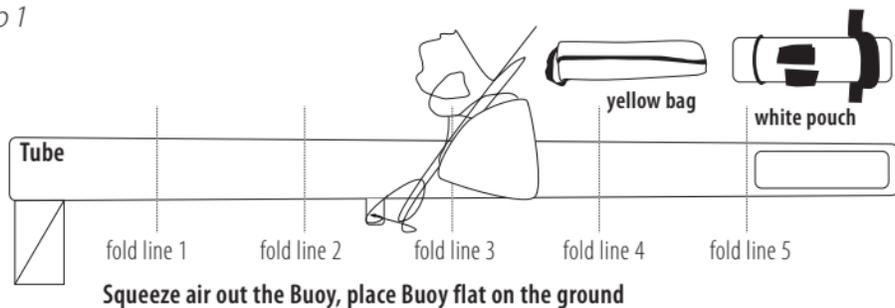

Step 2

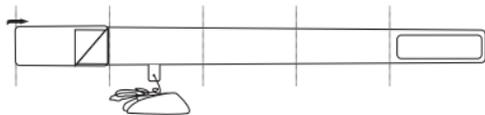


Step 3



Step 4



Step 5

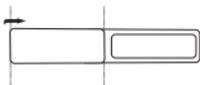

Step 6



CARE and MAINTENANCE INSTRUCTIONS

- 1. Each Use:** Examine the service indicator clip and bottom cap, ensuring both are green. If the service indicator clip is missing and/or the bottom clip shows a red colour, the mechanism has been fired or is incorrectly fitted. Check the printed expiry date on the bottom cap of the inflator and replace it if expiry date has been reached.
- 2. Every two years leak test:** Please make sure that an authorized service station of SeaCurity GmbH makes a service every 2 years as from date of purchase! On this occasion a test for general leakage must be made by orally inflating the buoy. Let the buoy stand overnight; the buoy should still be firm next morning.
- 3. Before folding the buoy** you must check the expiry date printed on the signal light which is fixed on top of the buoy's pole. If expiry is earlier than next service date (2 year service interval from purchase date) you must exchange this signal light (spare part of SeaCurity GmbH).

GB CARE and MAINTENANCE INSTRUCTIONS

This product does not need cleaning, but in case it gets dirty, please follow the instruction below:

- Take the Buoy out of the package carefully, do not pull the tab accidentally.
- Remove the inflator and CO2 cylinder before cleaning.
- Use wet towel wipe all the fabric till clean. Use fresh water only.
- Hang to dry on a plastic coat hanger.
- **DO NOT get Cylinder, Inflator assembly wet.**
- **DO NOT use bleach or fabric softener.**
- **DO NOT dry-clean, iron, use a heater or tumble dry to quicken the process.**

WARRANTY

SeaCurity GmbH grants a warranty to the consumer for a period of 5 years as from the date of purchase from the dealer. The warranty covers the repair or replacement of the buoy or parts thereof in case of evident defects of the production. The warranty requires as a pre-condition that the buoy has been serviced within the prescribed service intervals by an authorized service station evidenced by a respective document of the service station.

SERVICE RECORD

GB

DATE of PURCHASE:

SERIAL NUMBER:

OWNER'S NAME:

SERVICE DATE	NEXT SERVICE DATE	AUTHORIZED FACILITY STAMP

Service by SeaCurity GmbH authorized repair facility every two years as from date of sale.
The service station Can be found on www.seacurity.co.uk