


ARADA
— DEVON —

Dry stove installation guide

**Suitable For Freestanding
and Inset Appliances**



FREESTANDING

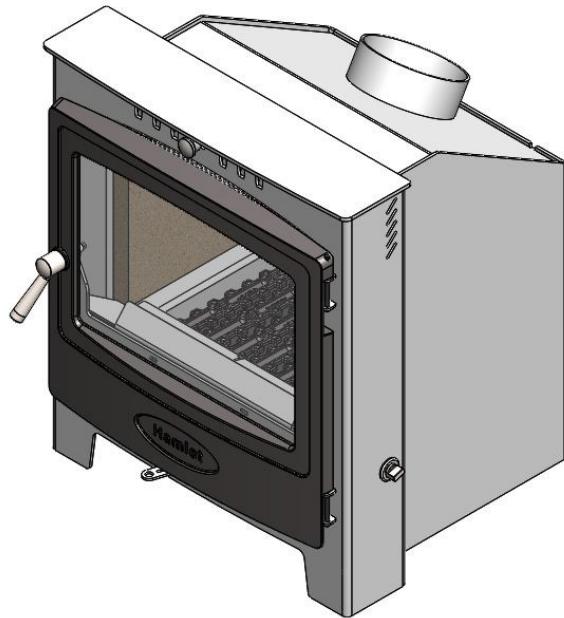

INSET

BK545 REV 15

BS EN 13240:2001 +A2:2004

BS EN 13229:2001 +A2

Issue Date: 04/09/2025

CE 25 UK
CA

Arada Dry Stove Installation Guide

Please carefully read through the entirety of this installation guide before commencing installation. Should you have any questions about our stoves that are not covered in this manual, please contact the Arada retailer in your area, or call our technical support department on +44 (0)1297 632052.

Arada has a policy of continuous product development and therefore we reserve the right to amend specifications without prior notice.

Please check with your retailer or dealer if you are unsure about any aspect of your stove, its installation or correct use.

Contents

	Page No.
<u>INTRODUCTION</u>	
Warnings	4
Health and Safety.....	4
<u>INSTALLATION REQUIREMENTS</u>	5–7
Hearths and Recesses	5
Combustible Materials.....	6
Air for Combustion.....	6–7
<u>FLUES AND CHIMNEYS</u>	7- 8
<u>INSTALLING THE STOVE</u>	9–12
Removing the door	9
Removing the throat plate and liners	9
Assembling the grate bars	9
Fitting the spigot outlet to the stove	10
Connecting the spigot outlet to the flue system	10
Sealing of terminals	10
Inset stove specific instructions	10
Inset stoves flue connection	10
Adjusting the self-levelling feet (Cam style)	11
Adjusting the self-levelling feet (Levelling screw style)	11
Firebox liner panels	12
<u>COMMISSIONING THE STOVE</u>	13-14
<u>FINAL HAND OVER TO CUSTOMER</u>	14
<u>ADDITIONAL NOTES</u>	14

Warnings

It is a legal requirement that the installation of all new or replacement, wood or solid fuel heating appliances obtain Building Control approval from your local authority. This can be done by using a qualified heating engineer, affiliated to a government approved Competent Persons Scheme such as those listed on www.gov.uk/building-regulations-competent-person-schemes

You can also consult your local buildings inspector / controller.

All local regulations, including those referring to National and European standards, need to be complied with when installing the appliance. Refer to the current issue of BS 8303 code of practice for the installation of domestic heating appliances burning solid mineral fuel.

This stove should not be installed into a chimney that serves any other heating appliance.

Any further warnings in this document will be marked out in a box such as this one. Ignoring the warnings could lead to damage/injury to persons and/or property.

Any manufacturer's instructions must not be taken as overriding statutory requirements.

Arada Ltd will not be responsible for any consequential or incidental loss or injury however caused.

Health and safety

Before any installation work is undertaken consideration must be given to the Health and Safety at Work Act 1974. Safe working practices should be followed at all times.

Please consult health and safety guidelines for advice on handling heavy and/or large items. During installation ensure that adequate precautions are taken to avoid unnecessary risk to yourself or any householder.

The danger from the caustic nature of fire cement, should be avoided by using these accepted methods:

Wear gloves when handling fire cement. Wear goggles when chiselling or looking up chimneys.

This stove contains no asbestos. If there is a possibility of disturbing any asbestos in the course of the installation then please seek specialist guidance and use appropriate protective equipment.

Hearths and Recesses

The stove should be installed on a surface with adequate load bearing capacity. If the existing construction does not meet this prerequisite, suitable measures (e.g. load distributing plate) should be taken to achieve it. Please pay particular attention when examining existing building work for suitability to meet the following requirements.

When installing an inset stove, hearths should have a sufficiently flat surface to allow a good seal to the stove body to be created during its installation. Stonework, uneven bricks etc., may need further work to ensure that this can be achieved. Any voids behind an inset stove should be filled with vermiculite or similar.

The stove should be installed on a non-combustible surface not less than 12mm thick (conforming to Building Regulations unless otherwise specified) of suitable load bearing capacity and heat resistance. Allowances should be made for the expansion and contraction of any materials which are fitted up to and near the appliance.

If required, the dimensions of any constructional hearth for all stoves should project at least 500mm forward of the front of the appliance and 150mm at the sides. The surface of the hearth should be free of combustible materials. The superimposed hearth for

all installations should project at least 225mm forward from the front of the appliance and 150mm either side of the edge of the appliance.

In most buildings with solid concrete or stone floors, the requirement will be met by the floor itself, but mark the hearth to ensure floor coverings are kept well away or use different levels to mark the hearth perimeter.

Please be aware that hot air can cause staining above the fire in a similar fashion to walls above radiators.

To help prevent this and cracking we recommend that any plaster above the fire should be fitted with reinforcing expanding mesh for at least 220mm above, and the full width of the fire. You should also use a suitably heat resistant plaster which should be allowed sufficient time to fully dry before using the stove or cracking is likely to occur

Combustible Materials

Please view the product sheet which accompanied your stove for specific minimum distances to combustible measurements.

Ideally, adjacent walls should be of suitable non-combustible construction, preferably brickwork.

In large fireplaces take care that any supporting beam is protected by a 13mm sheet of heat resistant fire board spaced 12mm off the surface with strips of non-combustible material. Make sure that there is a gap between an un-insulated flue system and any combustible material. This gap must be at least 3X the outside diameter of the flue pipe, or 1.5X the flue diameter to non-combustible surfaces. Please consult the flue manufacturers specification for insulated flues.

Air for combustion

All stoves require ventilation to burn safely and correctly. There are a number of requirements that need to be met when installing a stove, for example, allowing for the permeability of the house (air permeability is the general seepage of air into the house via air vents, doors and windows etc.)

There must always be a permanent means of providing air for combustion into the room in which the stove is installed. Air starvation will result in poor flue draw and may cause smoke to leak into the room.

For all installations it is recommended that a permanent vent with a total free area of at least 550mm² for every kW above 5kW should be connected directly to the outside air. Installations in properties built after 2008 should have their vent increased by a further 330mm² for each of the first 5kW. Alternatively this air can be supplied through an external wall of an adjacent room, which itself has to be connected to the room the appliance is installed by a permanent vent of the same size.

Note: If the appliance is fitted with a draught stabiliser (or if one is fitted to the flue pipe or chimney in the same room as the appliance) then the permanent air entry opening (or openings) should be increased by 300mm² for each kW of rated output up to 5kW and an additional 850mm² for each kW output over 5kW. If there is more than one appliance in the property then each appliance must be supplied with adequate

combustion air so that all appliances can be lit simultaneously.

The positioning of any air vent must be so that it cannot be liable to blockage or obstruction. Ideally it should also be positioned where it is unlikely to cause a cold draught. It should not be positioned in the fireplace recess.

For more detailed guidelines on required ventilation sizes please refer to the Document J Building Regulations (Combustion Appliances) at the www.planningportal.gov.uk website.

If you plan to use an external air supply on a suitable stove, and have bought the appropriate Arada External Air Supply Kit, please refer to the instructions included with the kit on how to install it.

The accompanying stove technical product sheet states whether or not your appliance is compatible with a Direct Air Supply Kit.

Flues and Chimneys

The stove must be connected to a suitable and efficient flue so that products of combustion (fumes) from the stove are expelled to the outside air. Please remember that chimney draught is dependent on four main factors :

- Flue gas temperature
- Flue height
- Flue size
- Flue terminal

To ensure a good up draught it is important that the flue gases are kept warm and that the flue size suits the stove. The termination of the outlet at the top of the flue also needs to comply with Building Regulations. The minimum effective height of the flue must be at least 4.5 metres from the top of the stove to the top of the flue outlet.

When warm the flue draught should be between 0.12 to 0.22mb (12 to 22 Pascals).

The draw of a chimney / flue can vary in different weather conditions and the customer should be made aware of this. Failure to correct an over-drawing flue will invalidate the warranty.

A chimney may comply with regulations but could still be subject to down draught and similar problems. A chimney terminating above the ridge level is generally less likely to suffer such problems.

If a new chimney is being provided it should fully comply with the relevant Building Regulations that specify the requirements for solid fuel burning installations.

Suitable types of chimney include the following :

- Masonry Chimney: Built with clay or concrete liners, or a chimney block system meeting Building Regulations. These types of chimneys should be installed in accordance with the Building Regulations and BS EN 15287-1:2007.
- Factory Made Insulated Chimney: Complying with BS 4543:Part 2 (often called Class 1 prefabricated metal chimney). These types of chimneys should be installed in accordance with Building Regulations and BS EN 15287-1:2007.

Due to the gradual introduction of European Chimney Standards chimneys will be specified according to their performance designation as defined in BS EN 1443 that covers the General Requirements for chimneys. The minimum performance designation required for use with solid fuel burning stoves is T450 N2 S D3.

The flue and chimney installation must be carefully checked by a competent person before fitting the stove to ensure it is suitable and will work safely. If the chimney is old (i.e.: built of brick or stone without a liner) or being opened up for reuse additional checks and smoke testing as described in Appendix E of the Approved Document J 2010 Edition should also be carried out to ensure the flue and

chimney are in good operating condition.

Check the existing flue is in good condition with suitable access for collection and removal of debris.

It is also important that suitable flue pipe (recommended at least 600mm in length) complying with the Building Regulations is used to connect the stove to the flue in the chimney. Suitable access should be provided into the flue for regular inspection and sweeping of the flue ways.

The installer should comply with Building Regulations requirements in respect of providing a Notice Plate giving details on the chimney, flue lining, hearth and fireplace installation.

Chimneys should be as straight as possible. Horizontal runs should be avoided except where the rear outlet of the appliance is used, in which case the horizontal section should not exceed 150mm in length. If necessary a combination of 45° and 90° bends can be used as long as the sum of their angles is not greater than 180° in total. i.e. four 45° bends, or two 45° and a 90° bend.

If the stove appears to be working hard but produces very little output to the room it is likely that excess draw is present in the chimney, and that heat is being sucked out of the appliance and up the chimney. If this is the case we recommend the fitting of a draught stabiliser in preference to a flue damper, in the interest of safety and efficiency.

Installing the stove

To make the stove easier to manoeuvre (and safer) we recommend you remove the following parts which can then be refitted when the stove is in its final position:

- Door (To help prevent the glass from breaking)
- Grate Bars
- Operating Tool
- Ash pan
- Throat Plate* (*Not Applicable To Lagom)
- Firebox Liners* (*Not Applicable To Lagom)

Removing the door

Open the door so that it is perpendicular to the stove body and then carefully lift the stove door upwards off its hinges. To replace the door reverse the instructions above.

Removing the throat plate and liners*

The throat plate rests on liners and (in some models) a tertiary air bar. With the fire door removed or open, push up on the throat plate with the palm of one hand. With the other, remove the side liners and then lower the throat plate forward. It is easier to lower one side of the throat plate first to help remove it from its position and to allow it to fit through the opening of the stove. Once the throat plate has been removed you can also remove the rear liner(s). To replace the liners/throat plate follow the steps above in reverse.

*** NOTE :** Lagom liners cannot be removed before the

first few firings of the appliance, this is due to the transit adhesive used during production.

Assembling the grate bars

In a multi fuel stove the grate comprises of a series of cast iron grate bars, seated on a pair of combs. All bars in the grate are identical.

In stoves with a riddling grate system the bars should be seated with every other bar rotated 180 degrees, so the ends marked 'H' and 'L' alternate on each comb. When assembling the grate, fit bars to the low sections of the comb first by seating the ends marked 'L' onto the low part of the comb, whilst the ends marked 'H' should then be seated on the high sections.

In stoves with non-riddling grate systems the grate is assembled with the ends of the bars marked 'H' sitting on the front comb, and the ends marked 'L' sitting on the rear comb.



Figure 1: Bars shown seated on their comb outside the stove.

Fitting the spigot outlet to the stove

The flue outlet spigot and hot plate (blanking plate) can be found packed inside the appliance and must be fitted during installation*.

(*Only applicable to freestanding appliances).

Smear a very thin layer of fire cement or use the supplied self adhesive rope seal on the mating faces of the flue outlet and the hot plate. Fit the outlet to the appliance in the desired position.

Inset models have a single flue outlet and no blanking plate.

Connecting the spigot outlet to the flue system

The flue pipe must be fitted inside the outlet spigot as shown in Figure 2. Failure to do so could result in the spillage of condensation running down the flue. Fire cement should be used to create an airtight seal between the flue and spigot.

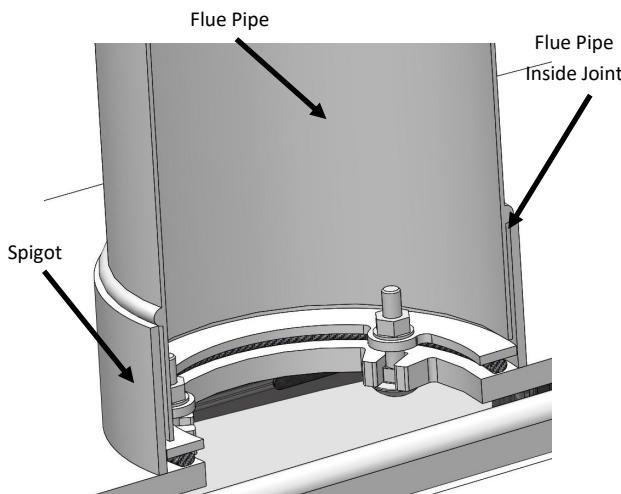


Figure 2: Fitting the flue pipe inside the spigot collar

Sealing of terminals

If an add in boiler is not to be fitted, please ensure that any partially cut circular terminals (located on the rear of the appliance) are sealed with fire cement, thus preventing surplus air entering the firebox, resulting in lower efficiency and poor fuel consumption.

Inset stove Specific Instructions

All inset stoves, are designed to be fitted in a 'builders opening' and not a chair brick. A suitable 'builders opening' will be required to facilitate installation, observing the relevant building standards in regulation, especially paying attention to the location and positioning of the lintel.

Inset stove flue connection

We strongly advise the connection of the inset stove onto a flexible flue liner (System Flue).


The reasoning for this, is to ensure the stove operates correctly and at maximum efficiency, maintaining a sound air tight seal for the flue connection and thus preventing products of combustion being emitted to the dwelling.

Please note the importance, for any voids surrounding an inset stove, must be filled with fire cement, vermiculite granules or mineral wool when installed for the interest of safety and heat efficiency .

Adjusting the self-levelling feet (Cam style)

If applicable, adjustment is as follows:


- Position the stove on the hearth into its final resting place.
- On the rear leg of the stove, loosen the pozi screw, and rotate the inner 'cam' shaped levelling foot until this touches the hearth.
- Re-tighten the pozi screw. Check the stove is level with a spirit level.
- Repeat for the other rear leg.

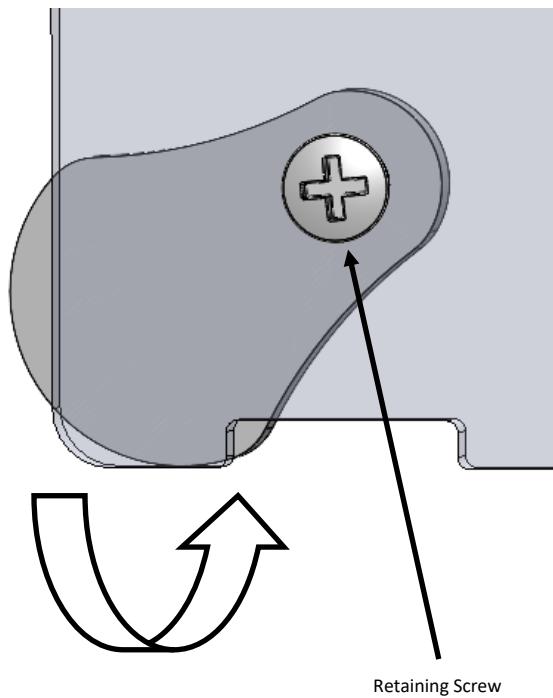

Adjusting the self-levelling feet (Levelling screw style)

If your stove model is factory fitted with the screw style, self levelling feet, then please follow the procedure below. Please note, an adjuster is fitted at each corner to allow the stove to be independently adjusted.

- Position the stove on the hearth into its final resting place.
- Using a 8mm open spanner, unscrew the levelling foot until this touches the hearth.
- Repeat for the remaining other corners.
- Using a spirit level adjust until the stove canopy is horizontal side to side and front to back.

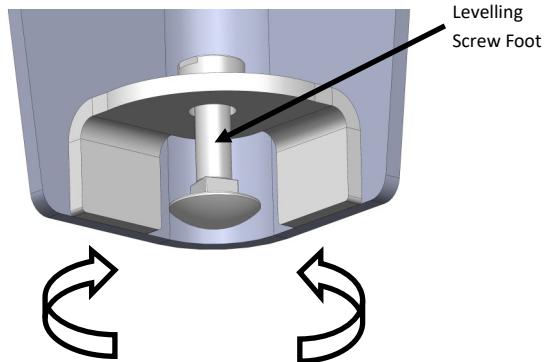

Firebox liner panels / 'liners'

Most Arada stoves use firebox liner panels to the sides and back of the appliance.

Depending upon model type, some wood only stoves also have in addition to the above, firebox liners in the base of the stove, that the wood is directly burnt upon.

Depending upon the model of appliance being installed there may be a combination of different firebox chamber materials used with vermiculite or ceramic style liner bricks or panels. These could also be shaped or formed to suit the firebox of the appliance.

Stoves which are being fitted with an add-in boiler should have the rear liner removed to create the space in which the boiler is fitted.


For the majority of Arada stoves, the throat plate sits on top of the side and rear panels. These should come fitted to your stove, if however they are not, proceed as follows to fit them:

- Remove the fuel retainer.
- Set the small liner(s) into the back of the firebox.
- Insert the side liner panels.
- Fit the throat plate with the single bend and two cut outs to the front facing up. The projecting lugs sit on top of the side liners. The long centre tab on the back edge rests on the rear liners.
- Replace the fuel retainer.

Commissioning the stove

Before handing over the installation to the customer it is a requirement under Document J (of the Building Regulations for England and Wales) that the appliance is lit and the functioning of the chimney system is checked for satisfactory operation.

- Most Arada stoves* are provided with a flue draught test point situated on the rear upper section of the appliance body. See pic below :

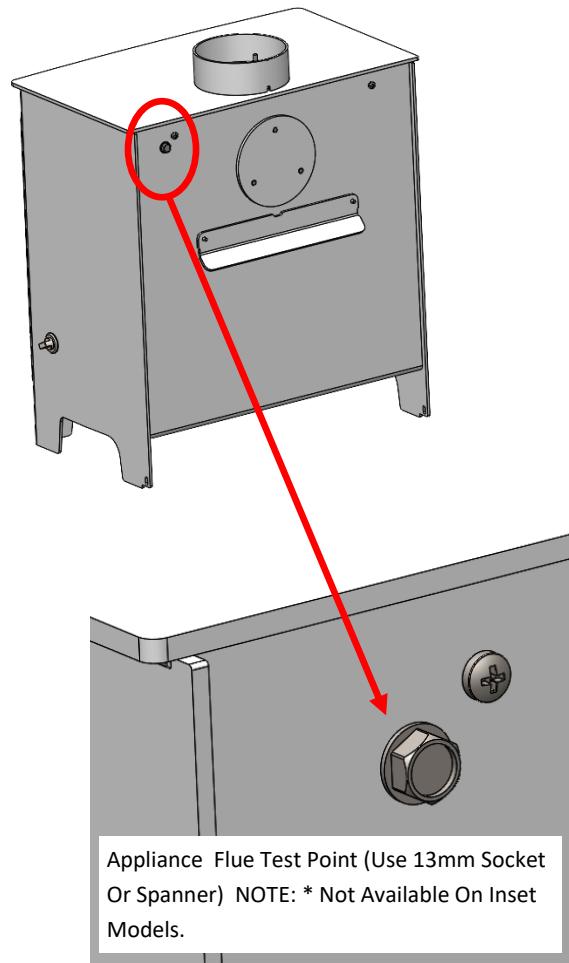

Typically, a flue draught tested at the appliance test point above, should have a minimum reading of 2.2mm to a maximum of 3.2mm water gauge (22 to 32 Pascals) this is required for a satisfactory flue performance.

This relates to 12-22 Pascals at the tapping point on the EN13240/13229 test rig. The flue draught should be checked under fire at high output and if it exceeds the maximum figure, then a draught stabiliser should be fitted, so that the rate of burning can be controlled to prevent over-firing of the appliance.

- Be sure that the chimney is operating and all smoke and fumes are vented to the atmosphere through the chimney terminal.
- Check all joints and seals.
- Clean the outside of the cold appliance with a lint free cloth or shoe brush to prevent any stains becoming burnt on.
- Check the warmed flue draught which should read 12 - 22pa, or 0.12 - 0.22mbar in the flue section or chimney.

Note, DO NOT use the appliance test point for this measurement.

- Consult a suitably qualified person who will have the knowledge and equipment to perform a test.

For a registered Competent Persons scheme (such as those referred to at www.gov.uk/building-regulations-competent-person-schemes), please complete a Certificate of Compliance, which is used for checking and reporting the installation as imposed by the Government.

Certificate Of Compliance is printed in the stove user guide, available to download from : www.aradastoves.com/support (then select your model)

Otherwise please ensure the installation is approved by your local building control officer.

Commissioning the stove continued :

- Ensure a Carbon Monoxide alarm is fitted.
Always follow the alarm manufacturers instructions for installation.
As a general rule, the CO alarm must be between 1m to 3m from the appliance, and approximately 150mm below the ceiling level, but always observe the manufacturers instructions.
- A fireguard conforming to BS 8423:2010 +A1:2016 should be used in the presence of children or infirm people.
- A notice plate should be provided containing information on the performance characteristics of the hearth, fireplace, flue or chimney & appliance.

Final hand over to Customer

Explain the following to the customer:

- How to operate the riddling mechanism and air control levers.
- The importance of an adequate air supply to the room.
- The importance of regularly having the chimney swept / inspected.
- That a protective glove should be used when operating the stove.
- How changes in the weather can affect the performance of the stove.
- Using the correct fuels.
- If burning wood, ensure that is well seasoned or has a moisture content of less than 20%.
- CO alarm, location and operation.

Additional Notes :

Arada Ltd,
The Fireworks,
Weycroft Avenue,
Axminster,
Devon,
EX13 5HU
United Kingdom

United Kingdom
Technical Helpline T: +44 (0)1297 632 052
www.aradastoves.com
www.aradastovesandspares.com